

Magnetic Roman Shade

WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

- I. Covered:
 - Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)
 - 5 years: All fabric
- II. Not Covered:
 - Normal Wear and Tear
 - Any product that fails due to: • abuse • exposure to salt air • improper installation • accident • extraordinary use • improper operation • alterations • improper cleaning • misapplication • damage from pests/insects/pets • improper handling • misuse
- III. Costs associated with: • product removal • transportation to and from the retailer • brand label removal • product re-measure • incidental or consequential damages • product re-installation • shipping

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.
- IV. To Report Shipping Damage: If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.
- V. To Obtain Service: If you suspect this product has a manufacturing defect in materials or workmanship: 1. Locate the sales receipt 2. Call place of purchase. Any unauthorized returns will not be accepted.
- VI. Warranty Remedy: THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following:

 - repair the product • replace the product • refund the cost of the product

Colors vary from lot to lot and may not exactly match sample swatch or previous purchases.

Discontinued items or color selections will be replaced with the closest equivalent current product.
- VII. YOUR RIGHTS UNDER STATE LAW:

This lifetime limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Some states do not allow limitations on how long a warranty lasts, so the above limitations may not apply to you. No agent, representative, dealer, or unauthorized employee has the authority to increase or alter the obligation of this warranty. This lifetime limited warranty supersedes any previous versions.

INSTALLATION INSTRUCTIONS

Step 1. Check Package Contents


Missing part? Call 800-264-1190

Mounting hardware kit includes the following:

Part	Quantity
a. Mounting Bracket	2 (shades up to 36-7/8" wide)
	3 (shades up to 47-7/8" wide)
	4 (shades up to 72" wide)
b. 1/8" Screws	2 per bracket
c. Operating Handle	1 (shades up to 59-7/8" wide)
	2 (shades up to 72" wide)

[Note: one extra screw of each noted size is included for convenience]


Step 2. Tools Required

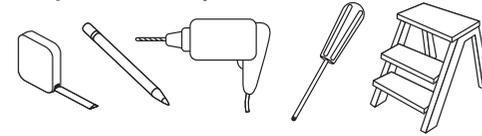

Pencil, tape measure, screw driver, drill, step stool.

Step 3. Bracket Location and Installation

Your shade may be installed either inside the window frame or outside the window frame. One mounting bracket should be positioned about 2" to 4" from each end of the head rail. For wider shades that require 3 or 4 brackets, these should be spaced evenly between the two outermost brackets.

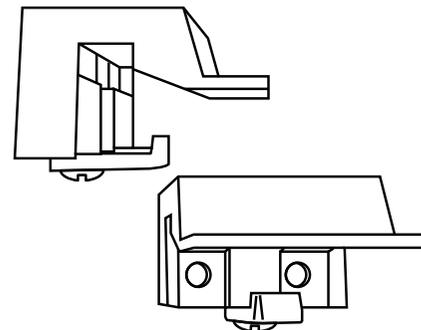

For Outside Mounting:

Clip the brackets onto the head rail as described in Step 4 (see below). Hold


the shade level at the height desired and center it over the window opening. Mark the exact location of each bracket with a pencil. Remove the brackets from the head rail and position the top of each bracket at the marked location. Attach each bracket using the 1/8" screws, predrill the screw holes using a 5/64" drill bit.

For Inside Mounting:

Clip the brackets onto the head rail as described in Step 4 (see below). Hold the shade in place and make a pencil mark at the rear of each bracket where it contacts the inside of the window frame. Remove the brackets from the head rail and align them with the marks. Attach each bracket using the 1/8" screws, predrill the screw holes using a 5/64" drill bit.

Step 4. Securing the Head Rail

Lift the head rail into position such that the front edge of each bracket is under the inner front edge of the head rail (see illustration).

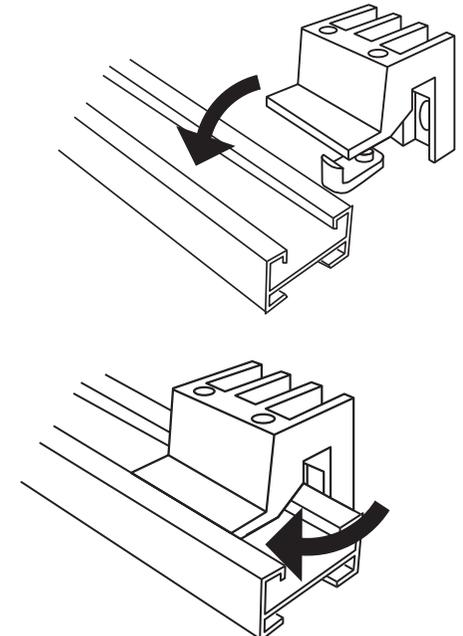


Position the tongue on each bracket so that it engages the slot in the head rail – tighten with a screw driver. Check carefully to assure that each bracket is properly secured.


Step 5. Attach the Operating Handle

The handle clips onto the bottom fold, not the bottom of the shade – See Drawing!

Note: Wider shades have (2) Handles - always grasp both handles when lifting and lowering the shade.

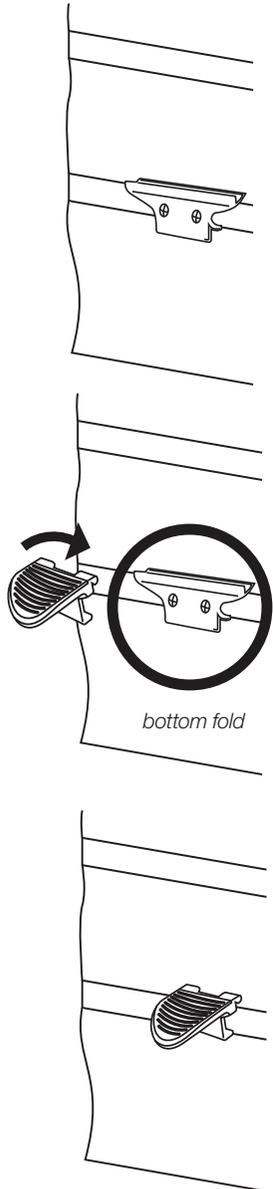

Step 6. How-To-Operate

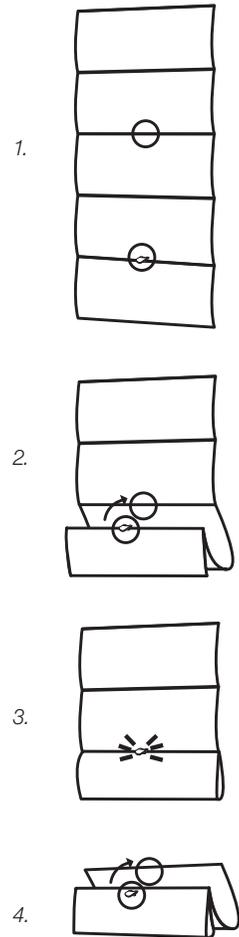

To raise the shade: grip the handle and lift the bottom fold so that it contacts the magnets in the 2nd fold above it. There are magnets in every other fold, so raising the shade is a sequential process: Lift & Attach and then Lift & Attach again until the shade is raised as much as desired. Note that the number of folds varies based on the length of the shade, so you might have to Lift & Attach up to four times to fully raise the shade. The handle is designed to minimize contact with the shade fabric. Always raise and lower the shade slowly to assure that the fabric gathers neatly.

To lower the shade: grip the handle and gently pull straight down.

CLEANING

The vinyl head rail and bottom rail can be wiped clean with a damp sponge.

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush attachment.

For 100% Polyester, Cotton/Poly blends and 100% Cotton or 100% Linen fabrics you may: Spot clean with warm soapy water using mild detergent and a clean sponge. Air dry, and then steam or iron.

Ironing:

100% Polyester: If necessary, steam polyester or gently iron on a low heat setting to remove stubborn wrinkles. 100% Polyester fabrics release wrinkles easily. Steam or iron on the Polyester / Synthetic Fabrics setting (Low), but be aware that Polyester will melt if the iron is too hot.

Cotton/Poly blends: If necessary, gently iron on a Blended Fabric (Medium) setting to remove stubborn wrinkles.

100% Cotton and 100% Linen: If necessary, gently iron on a Cotton (High) setting to remove stubborn wrinkles.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may Call: 800-264-1190

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed