 


# Cordless Shade – Installation Instructions

Please follow these Installation Instructions  
You will need a pencil, tape measure, drill, screwdriver, pliers.

 
## Choose the Correct Fastener



1 1/2" #8 Hex Head  
Wood Screws (Included)

Alternative fasteners should be used for aluminum or  
concrete installations (Not Included with Blinds)


Additional fasteners other than those sent with your shading may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.



Mounting Bracket



1 1/4" Hex  
Head  
Bracket  
Screw

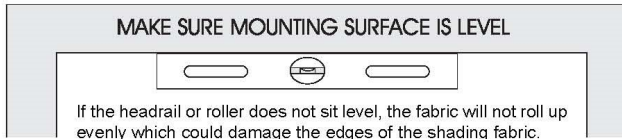

Hold Down Bracket  
(optional)



Hold Down  
Bracket Screw



Headrail Extension &  
Side mount Bracket




Nut &  
Bolt

## Step 1. BRACKET INSTALLATION

The end bracket should be located centerlines 2" from each end. Depending on the width of the shading, necessary additional brackets may be evenly spaced between the two end brackets.


Shade width	# Brackets
Up to 40"	2
>40" - 72"	3
>72" - 84"	4
>84" - 96"	5

### Inside Mount

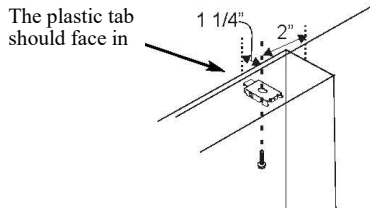


Make sure that the screw head is fully recessed inside the clear plastic part of the mounting bracket

### Outside/Wall Mount

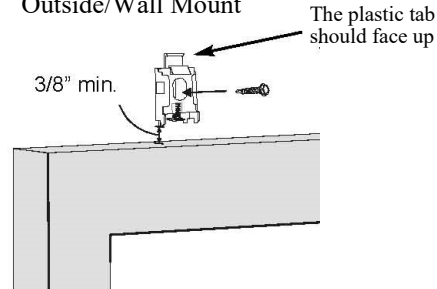


### Side Mount (optional)

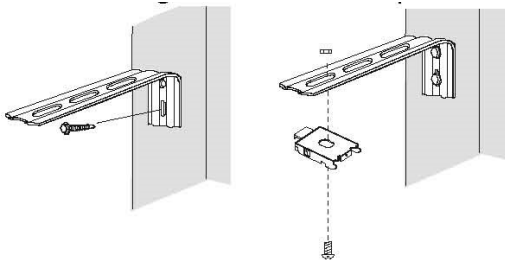

Measure from window sill up to desired mounting position on each side of the window frame. Mark position. Mount Side Mount Brackets on each side of window frame as shown. Make sure to confirm that headrail will sit perfectly level. Once Side Mount Brackets are installed and properly positioned, attach the Standard Mounting Brackets using nuts and bolt provided.

### Extension Brackets (optional)

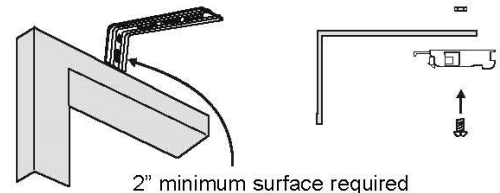


Optional Extension Brackets are used to project the back of the shading up to 2 1/2" from the mounting surface. Attach the Standard Mounting Bracket to the extension Bracket with the nut and bolt provided

# Cordless Shade - Installation Instructions


## Step 2. HANGING THE SHADE

Inside Mount or Extension Brackets

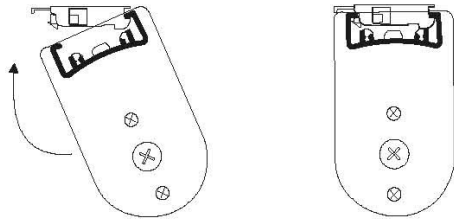


Hook the rail into the front of the bracket and rotate it until the back of the rail securely snaps into place.

Outside / Wall Mount

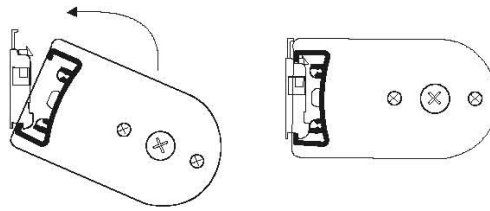


Hook the rail into the front of the bottom of the bracket and rotate it until the back of the rail securely snaps into place

Un-Install Shade - Inside Mount

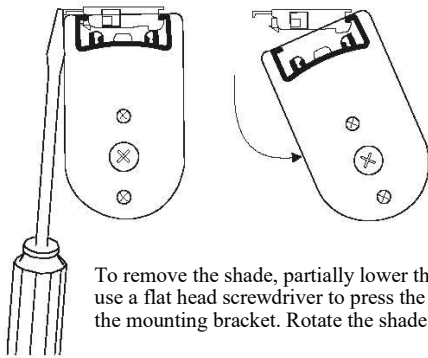

To remove the shade, partially lower the shade and use a flat head screwdriver to press the clear tab on the mounting bracket. Rotate the shade to remove it

Un-Install Shade - Outside / Wall Mount

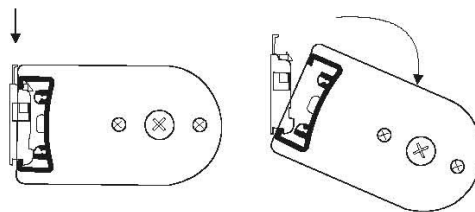


Press down on clear tab and then rotate shade to release


## Step 3. TENSION ADJUSTMENT

If the shade does not retract fully, you may need to increase the tension by rotating adjustment wheel with your fingers.

On a STANDARD ROLL the adjustment is made at the LEFT end of the shade. On a REVERSE ROLL the adjustment is made at the RIGHT end of the shade.

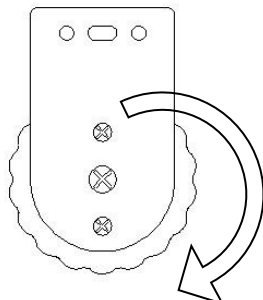

Increase Tension

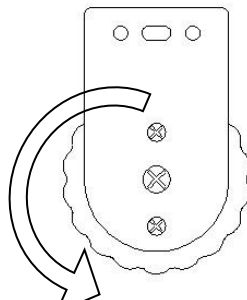


Decrease Tension

# Cordless Shade - Installation Instructions

## Step 4. UP-STOP ADJUSTMENT


Retract the shade and let it stop at the top. If you do not like where the up-stop is set it can be adjusted by rotating the adjustment wheel with your fingers

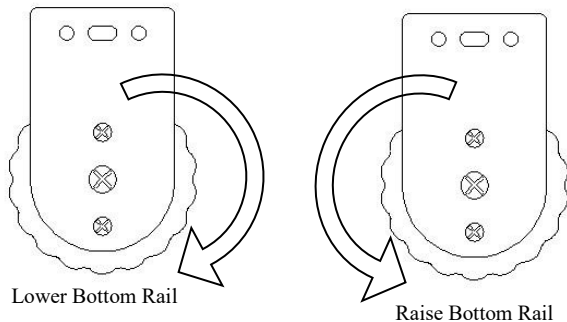

Be sure the shade is fully raised before making adjustments.

On a STANDARD ROLL the adjustment is made at the RIGHT end of the shade. On a REVERSE ROLL the adjustment is made at the LEFT end of the shade.


## Step 5. HOLD DOWN INSTALLATION - (Optional)

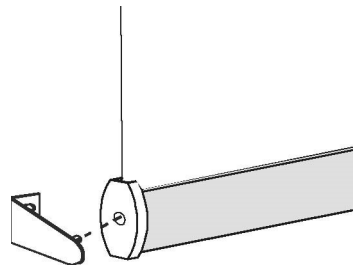

Optional Hold Down Brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each Hold Down into the hole in each End Cap and mark the screw holes. Make sure the pins are level and aligned. Raise the shade, then screw the Hold Down Bracket into the mounting surface.

## Step 6. SKEW ADJUSTMENT - (If Necessary)


If the shade does not raise evenly, first make sure the mounting brackets are mounted level with each other. If the shade is not level, pull the shade all of the way down. Prepare a strip of masking tape approximately 5" long. On the side of the shade opposite of the skewing direction, and as close to the end of the roller as possible, lift the fabric toward the back of the shade using your fingers and slide the tape with the sticky side facing the roller up as far as possible. The tape is to be running parallel to the roller. Roll the shade up and check for skewing. If the shade is still skewing, add another strip of tape on top of the first one. If the shade is now skewing to the opposite direction, tear off about 1" of tape from the last strip installed. The tape is to be torn from the end closest to the center of the shade.

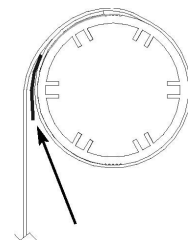

## Step 7. TROUBLE SHOOTING

### Over-extended shade (stuck in the down position)

If the shade is pulled down past the ordered length to full extension of the fabric it may not unlock. If this happens the roller needs to be turned by hand to unlock the release device. Turn the roller 1/4 in the direction that lowers the shade, then release to allow the shade to raise.

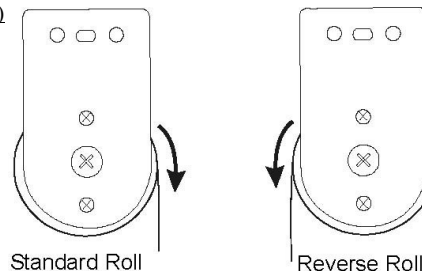

## CLEANING AND CARE

Occasional light vacuuming with a soft bristle attachment or gentle feather dusting is all that is required to keep your Roller Shades looking fresh and neat.

If the shading has any wrinkling, lower the shade and leave in the lowered position for 5 to 7 days. The heat from the sun will smooth out any light wrinkles.

